


# Door Levers

Two classic 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

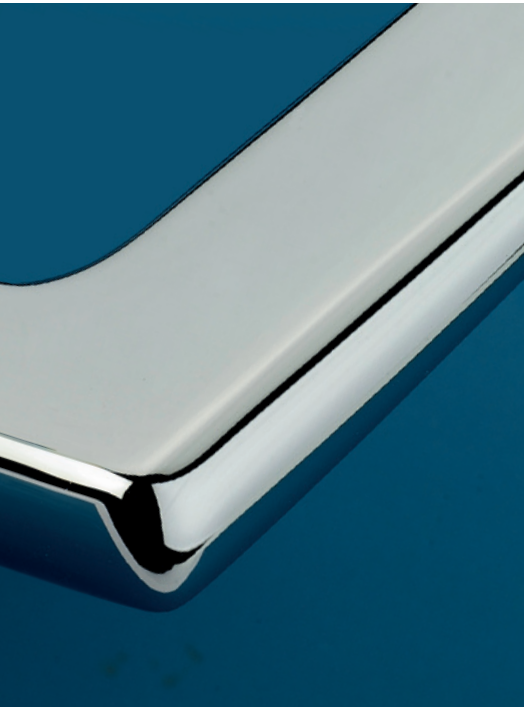


RH shown

▲ 7741



▲ with 49 series multipoint plate

▲ shown with 7844B rosette

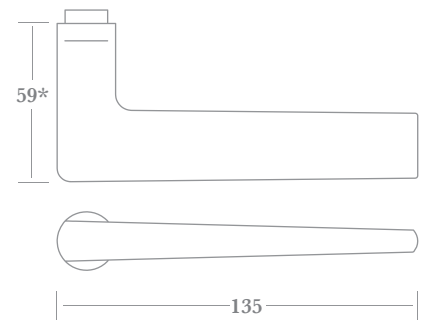

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7741)

2) add FINISH (e.g. 7741PC)

If single lever only required add HANDING (e.g. 7741PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7741PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.




RH shown

▲ 7742



▲ with 49 series multipoint plate

▲ shown with 7845B rosette

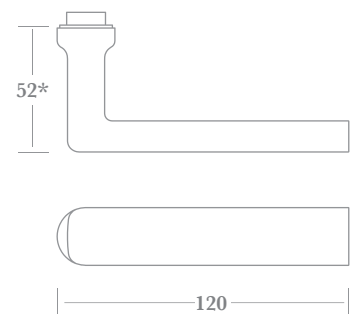

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two Art Deco inspired contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7729




▲ shown with  
3261A plate

▲ shown with  
7842B rosette

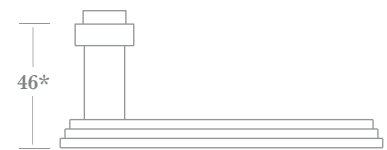

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.


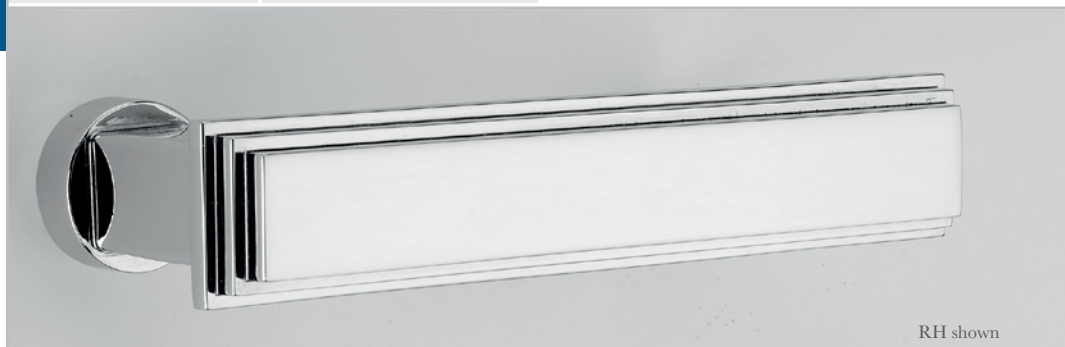


▲ 7728



▲ shown with  
5927C/R03 plate

▲ shown with  
7842A rosette

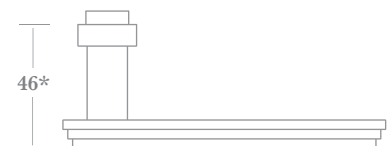

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7728**)

2) add FINISH (e.g. 7728**PC**)

If single lever only required add HANDING (e.g. 7728PC/**RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7728PC/**CM**) - see DB3:200.


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

# Door Levers

Four classic Art Deco period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

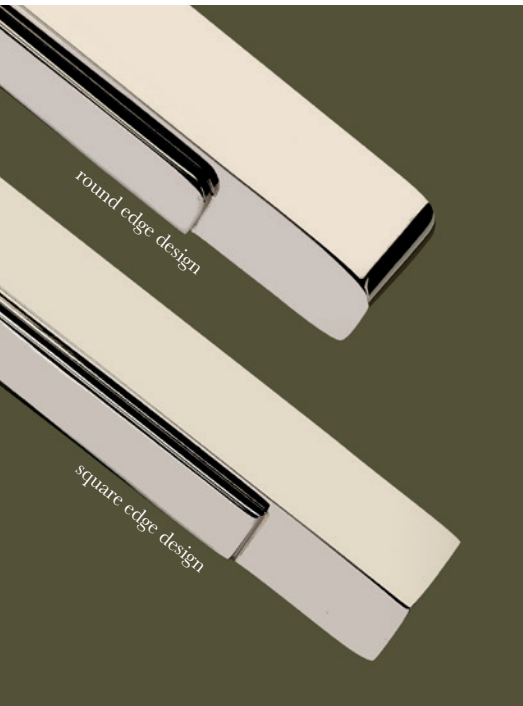

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER design (e.g. **7734**)






2) add FINISH (e.g. **7734PC**)

If single lever only required add HANDING (e.g. **7734PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7734PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

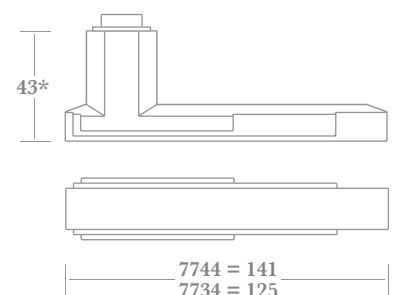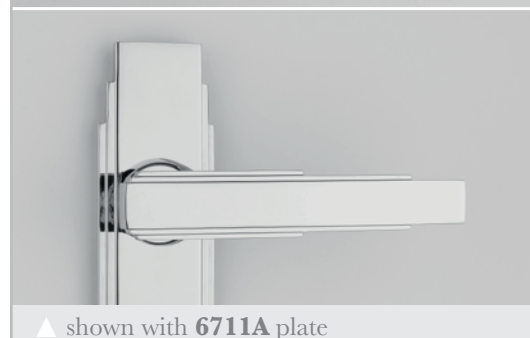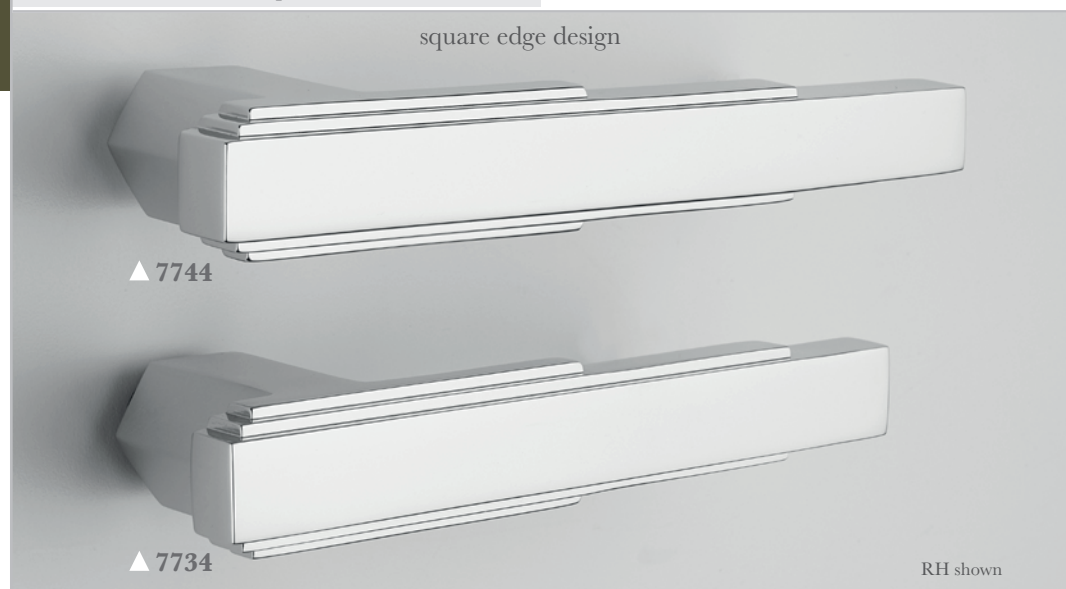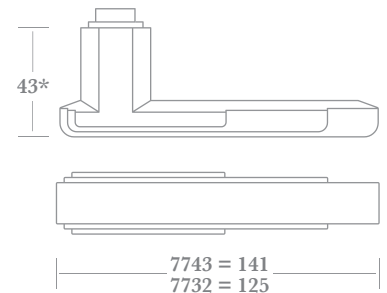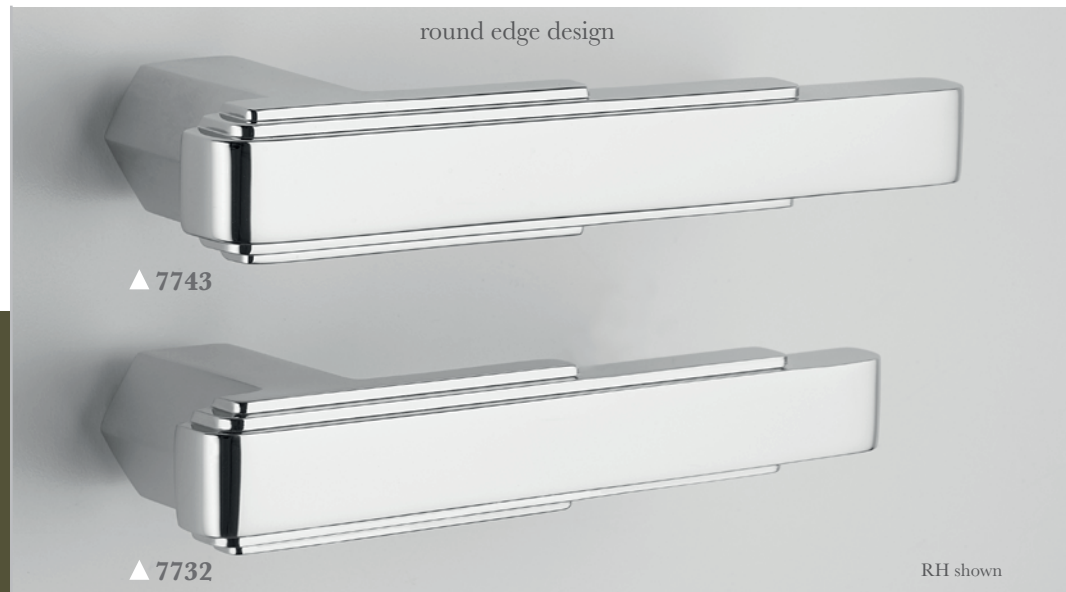

\* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).



# Door Levers

Traditional period Door Lever with rope knurled detailing designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7774**)

2) add FINISH (e.g. **7774PC**)

If single lever only required add HANDING (e.g. **7774PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7774PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



▲ **7774**



▲ **7775**





▲ **7764**



▲ **7774** shown with **6011A** plate

▲ **7774** shown with **7846B** rosette

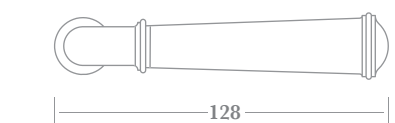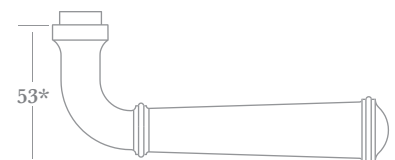

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Four traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7769**)

2) add FINISH (e.g. 7769**PC**)

If single lever only required add HANDING (e.g. 7769**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7769**PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



▲ 7768




▲ 7769



▲ 7770




▲ 7771

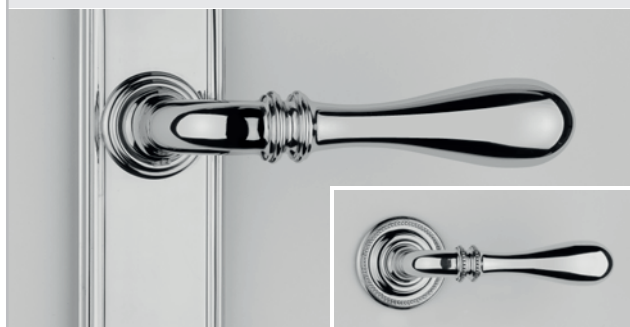

▲ 7770 shown with  
6011A plate

▲ 7771 shown with  
7847B rosette

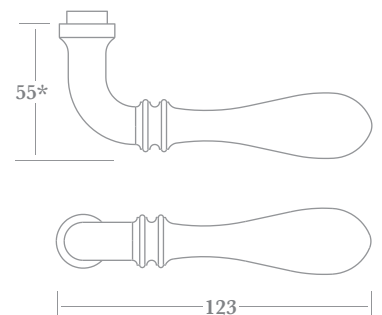


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

One traditional period, and one 1960's inspired, Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

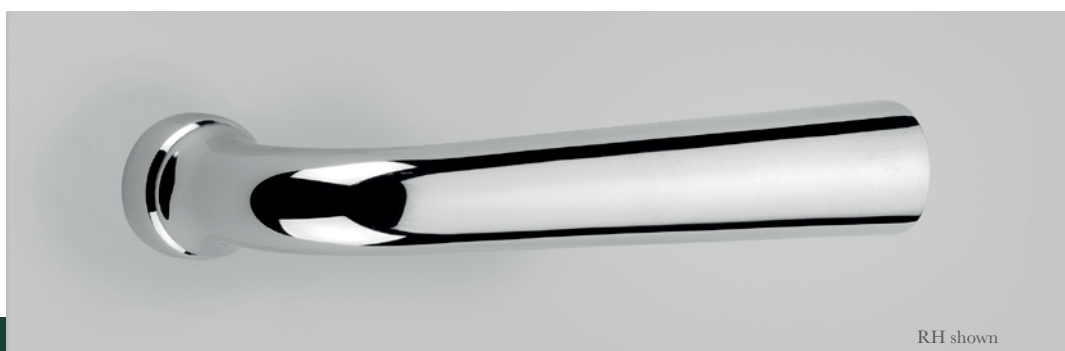


RH shown

▲ 7706



▲ with 49 series multipoint plate

▲ shown with 5951B rosette

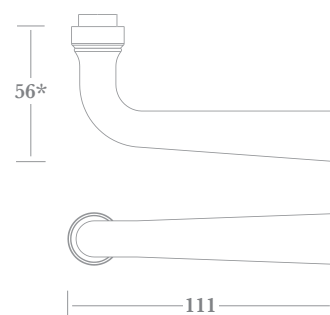

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7706**)


2) add FINISH (e.g. 7706**PC**)

If single lever only required add HANDING (e.g. 7706**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7706**PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

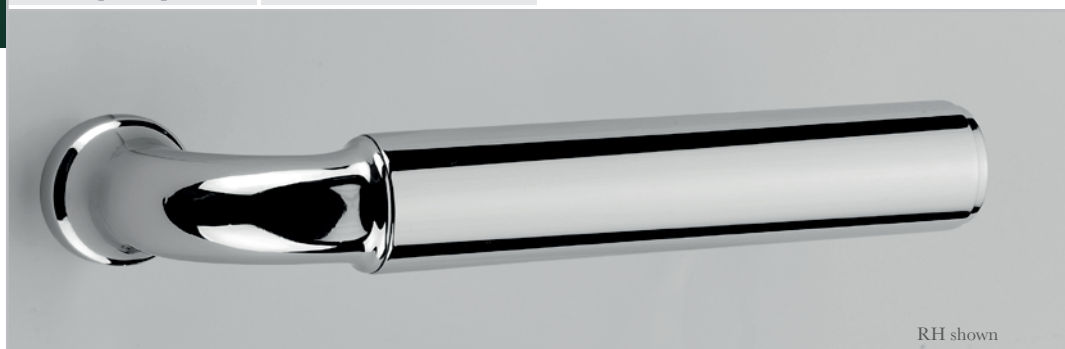


RH shown

▲ 7773



▲ with 49 series euro-profile lock plate

▲ shown with 7843B rosette

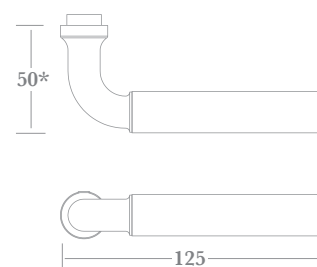



\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



# Door Levers


Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Whilst very similar in design, the 7716 is much slimmer and lighter than it's chunky and weightier brother, the 7717.

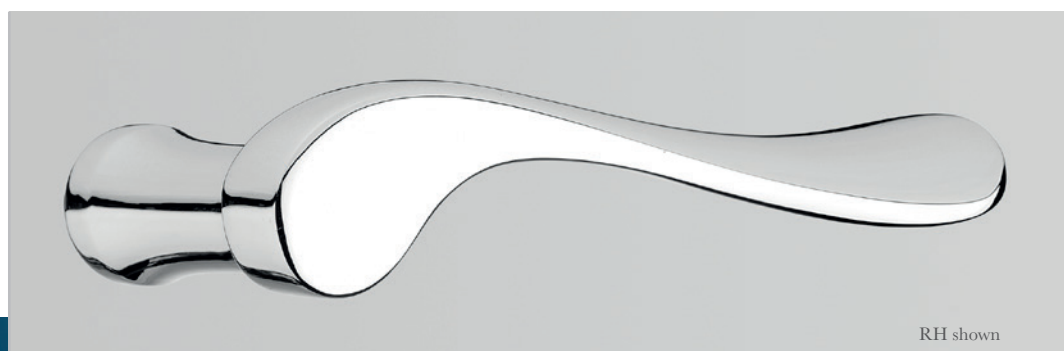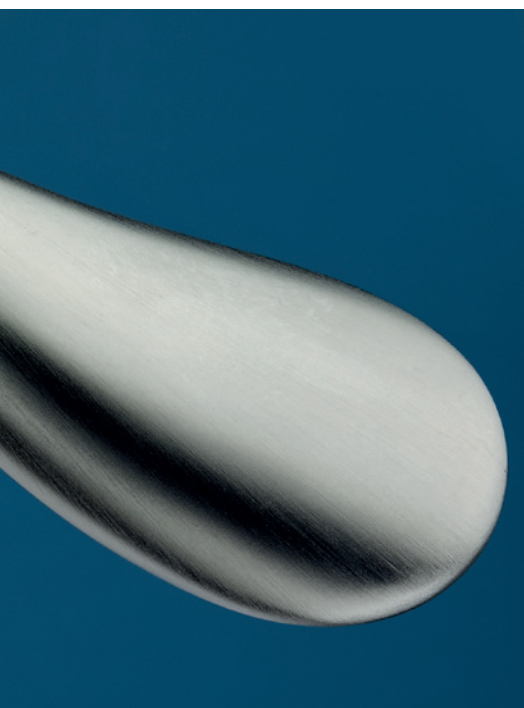


RH shown

▲ **7716** (light design - single lever 230g)

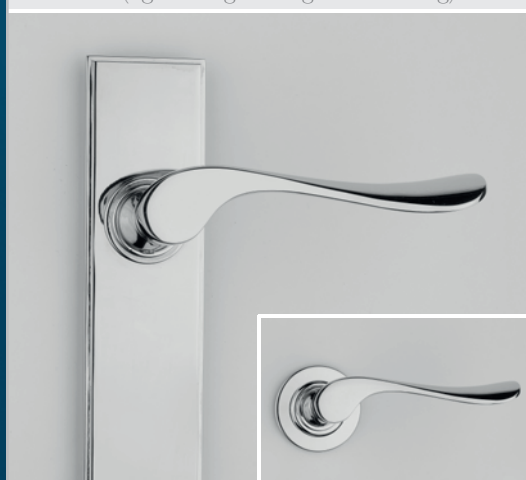

▲ shown with  
**5911A** plate

▲ shown with  
**7834B** rosette

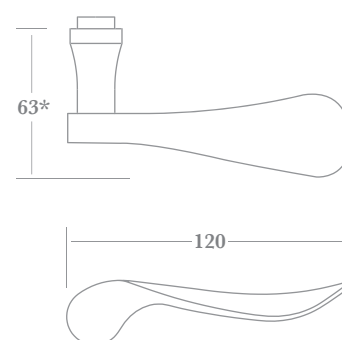

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

NB. Split Finish Sets are ordered as singles.

1) select LEVER (e.g. **7716**)


2) add FINISH (e.g. 7716**PC**)

If single lever only required add HANDING (e.g. 7716**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7716**PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

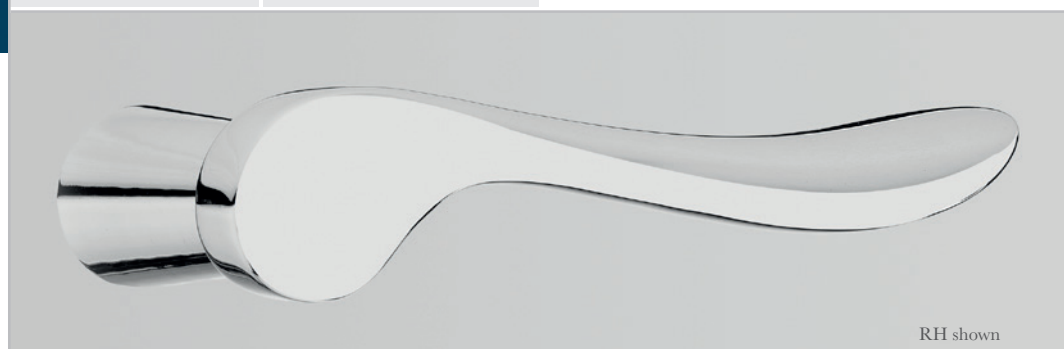


RH shown

▲ **7717** (heavy design - single lever 360g)



▲ shown with  
**4711A** plate

▲ shown with  
**7843B** rosette

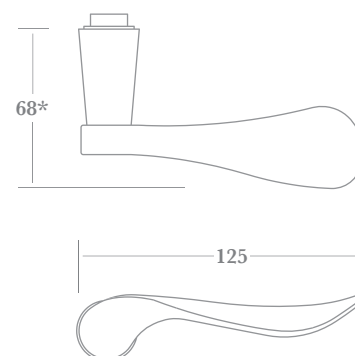

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers


Two contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7778

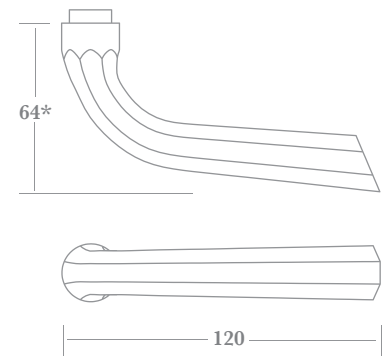▲ shown with  
**4711A** plate▲ shown with  
**7844B** rosette

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7778**)


2) add FINISH (e.g. **7778PC**)

If single lever only required add HANDING (e.g. **7778PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7778PC/CM**) - see DB3:200.



Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

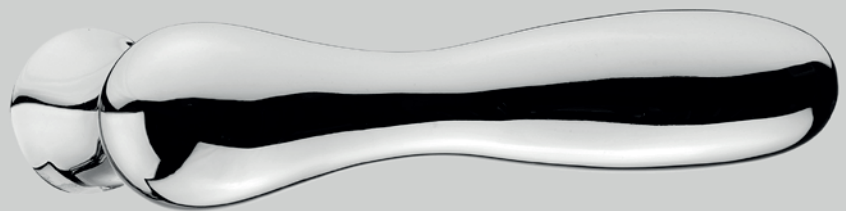

RH shown

▲ 7772

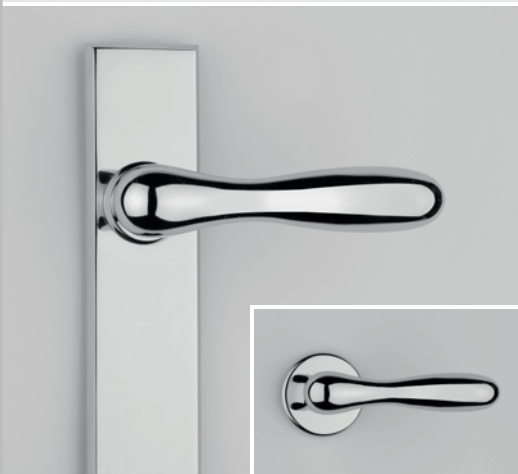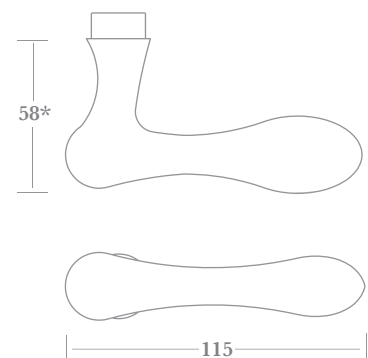▲ shown with  
**4711A** plate▲ shown with  
**7845B** rosette


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



# Door Levers

Two 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

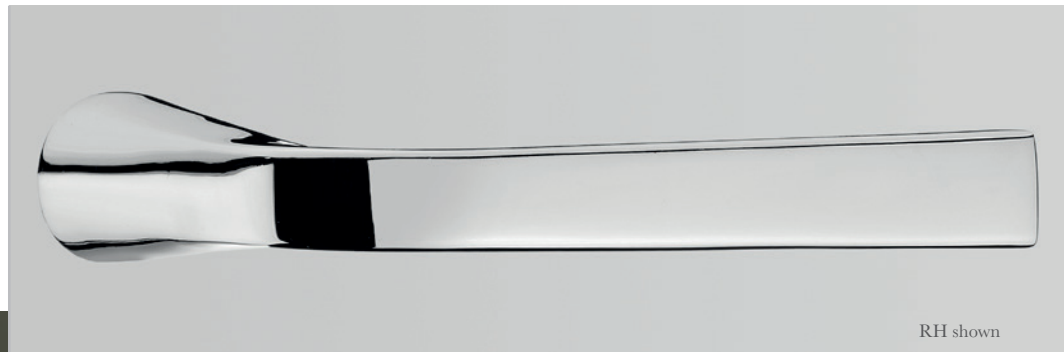


RH shown

▲ 7733



▲ shown with  
**4711A** plate

▲ shown with  
**7843B** rosette

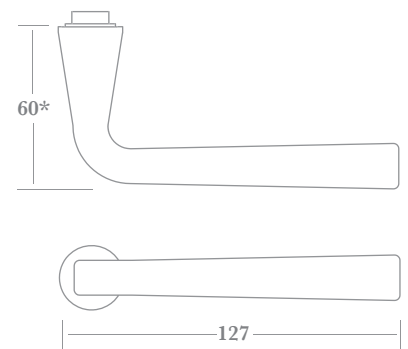

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7733**)

2) add FINISH (e.g. **7733PC**)

If single lever only required add HANDING (e.g. **7733PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7733PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.




RH shown

▲ 7776



▲ shown with  
**6011A** plate

▲ shown with  
**7847B** rosette

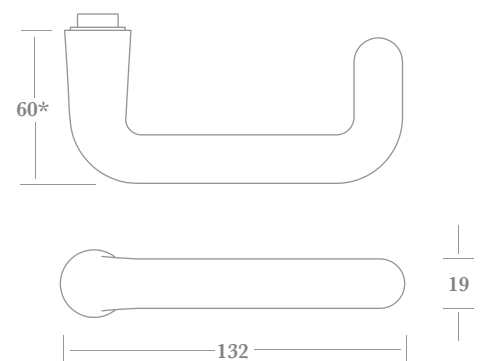


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

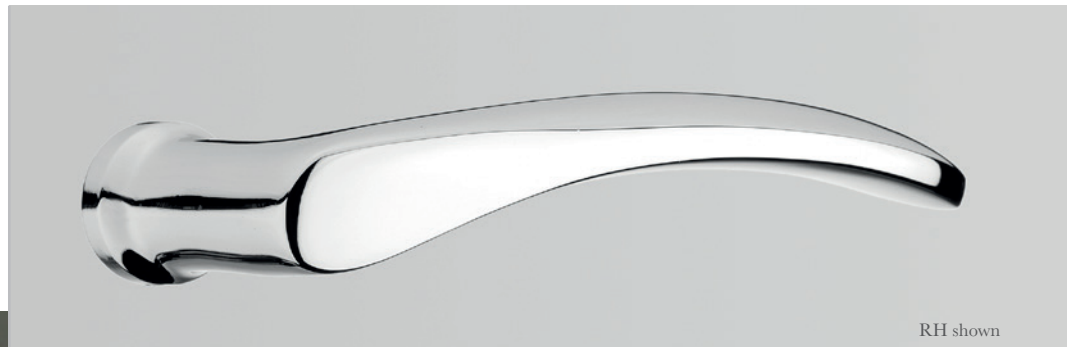


▲ 7710



▲ shown with  
5911A plate

▲ shown with  
7844B rosette

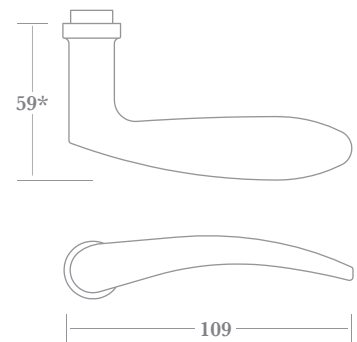

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7710**)


2) add FINISH (e.g. 7710**PC**)

If single lever only required add HANDING (e.g. 7710**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7710**PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

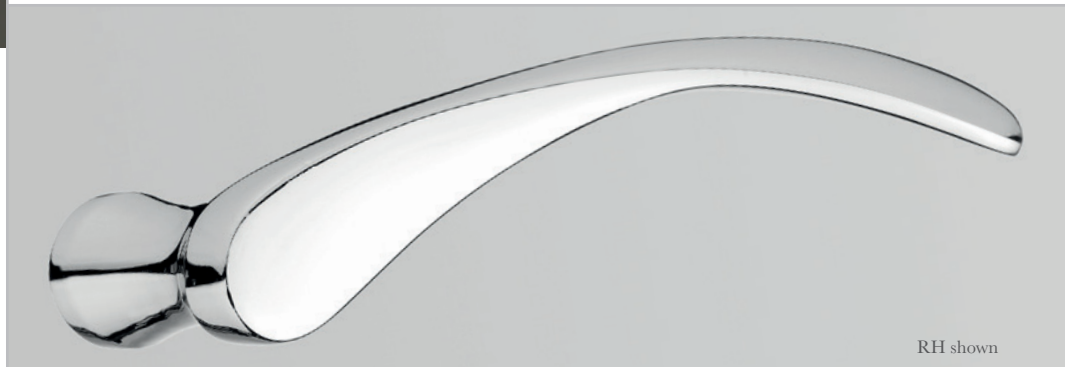


▲ 7714



▲ shown with  
4711A plate

▲ shown with  
7844B rosette

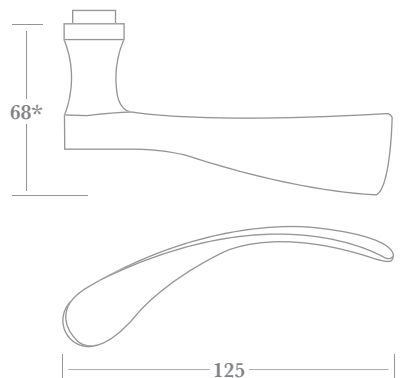

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

One Art Deco and two 1950's period Door Levers - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.




▲ 7736

RH shown



▲ shown with  
6611A plate

▲ shown with  
7841B rosette

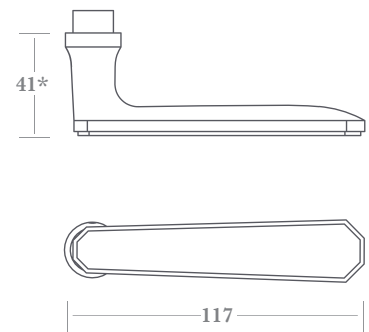

\* total projection; add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. 7736)

2) add FINISH (e.g. 7736PC)

If single lever only required add HANDING (e.g. 7736PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7736PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.




7702

7740

RH shown



▲ 7740 shown with  
7844B rosette

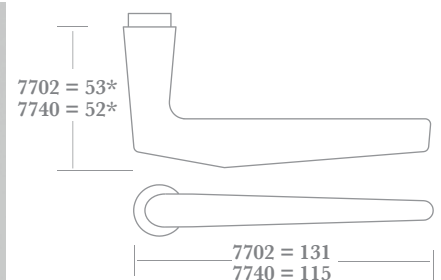

\* for total projection add rosette/backplate thickness (including raised collar if chosen).



# Door Levers


Two classic Regency Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7762

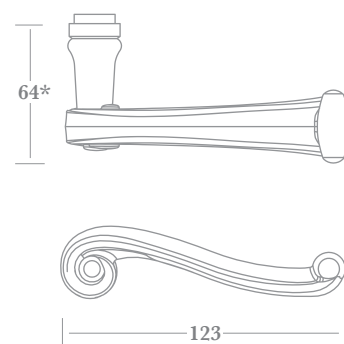
▲ shown with  
**5911A** plate▲ shown with  
**7841B** rosette

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



RH shown

▲ 7767

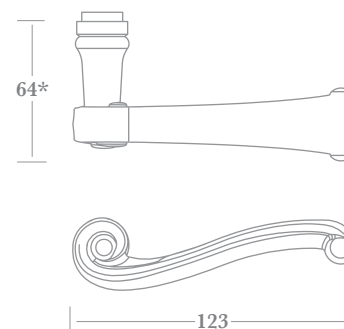▲ shown with  
**6011A** plate▲ shown with  
**7834B** rosette

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7767**)

2) add FINISH (e.g. 7767**PC**).

If single lever only required add HANDING (e.g. 7767**PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7767**PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

# Door Levers

Two classic Edwardian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7761



▲ shown with  
**6011A** plate

▲ shown with  
**7822B** rosette

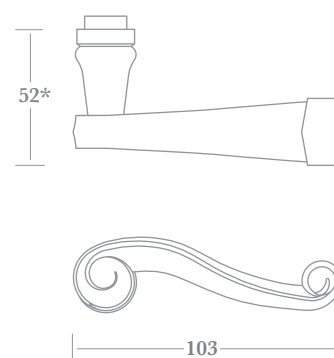

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7766**)


2) add FINISH (e.g. **7766PC**)

If single lever only required add HANDING (e.g. **7766PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7766PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

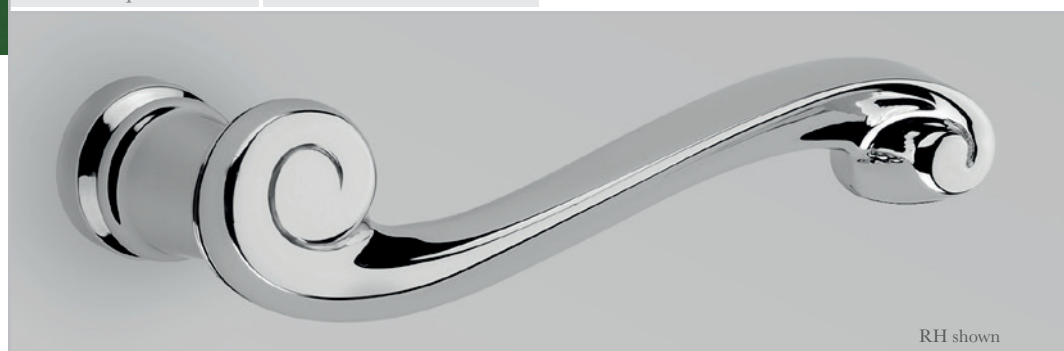


▲ 7766



▲ shown with  
**5911A** plate

▲ shown with  
**7847B** rosette

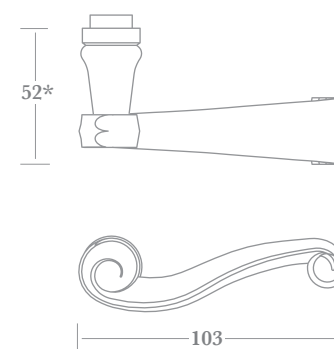

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic Georgian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.




▲ 7720



▲ shown with  
**6011A** plate

▲ shown with  
**7847B** rosette

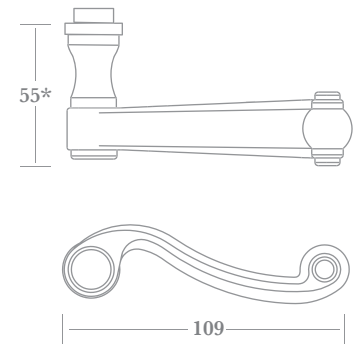

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7720**)

2) add FINISH (e.g. 7720**PC**)

If single lever only required add HANDING (e.g. 7720PC/**RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7720PC/RH/**CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.




▲ 7724



▲ shown with  
**5911A** plate

▲ shown with  
**7834B** rosette

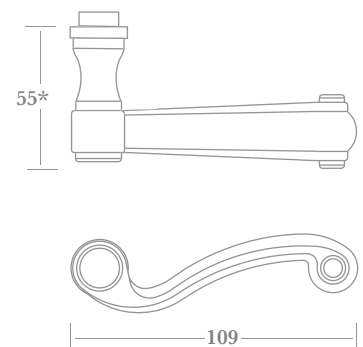

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



# Door Lever

An Art Deco inspired Door Lever designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.





▲ 7730



▲ shown with  
3221B plate

▲ shown with  
7842B rosette

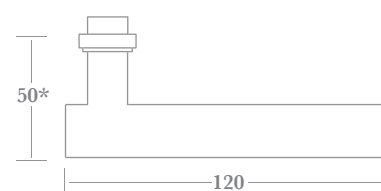

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7730**)

2) add FINISH (e.g. **7730PC**)

If single lever only required add HANDING (e.g. **7730PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7730PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.